

# TecLines TNT003 PoE power supply – Installation


1. 2x USB-C sockets with **1x power** and **1x power + data**.
2. Please connect the LAN cable to the TNT003 first. Then connect the power supply to the iPad / tablet.
3. Please ensure that your PoE Switch or PoE Injector supports at least the IEEE802.3at (PoE +) standard.
5. In the event of a connection error, please turn the USB-C plug on the TNT003. USB-C is normally rotationally symmetrical, but this may not be completely the case with the power + data connection.
6. Please activate the following iPad settings:

## Allow access to USB accessories

You can allow your iOS device to always access USB accessories, for example, if you use a USB assistive device to enter your passcode on your locked iPhone. Many assistive devices will automatically turn on the setting to allow USB devices the first time they're connected.

If you don't connect to USB accessories regularly, you might need to turn on this setting manually.

In Settings, go to Face ID & Passcode or Touch ID & Passcode, and turn on USB Accessories under Allow Access When Locked.

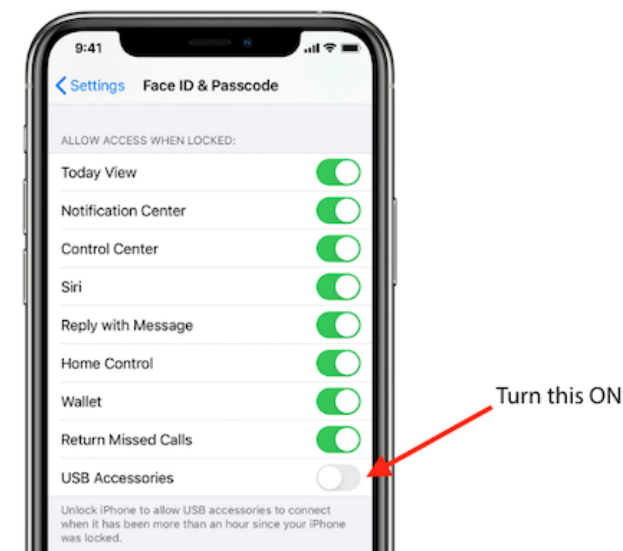

When the USB Accessories setting is off, as in the image above, you might need to unlock your iOS device to connect USB accessories.

Administrators can [control the USB Accessories setting](#) on supervised iOS devices using Apple Configurator or mobile device management.